

#### A COMPARISON OF DIFFERENT WELL TYPES AND THEIR APPLICATIONS

WELL TYPE	SUITABLE GEOLOGIC MATERIALS	ADVANTAGES	DISADVANTAGES
DUG WELLS	OVERBUROEN both low- and high-yielding materials (gravel, sand, silt, clay)	Does not require special machinery to construct     Large diameter pro- vides reservoir storage; augments low yields     Can be constructed in areas of limited access	Labour intensive to construct     Depth is limited because of caving     Well failure is common during dry periods because of usually shallow depths
BORED WELLS	OVERBURDEN both low- and high-yielding materials (gravel, sand, silt, clay)	Efficient method of constructing large-diameter wells     Large diameter provides reservoir storage; augments low yields	Depth is usually limited because of well-drilling equipment limita- tions and very hard earth materials
DRILLED WELLS	OVERBURDEN AND BEDROCK moderate to high-yielding materials (sand, gravel, sand- stone, limestone)	<ul> <li>Can reach deeper depths than other techniques</li> <li>Can penetrate bedrock</li> </ul>	Generally small- diameter wells with little reservoir storage capacity
DRIVEN OR JETTED WELLS (Sand Points)	OVERBURDEN moderate to high- yielding materials (sand and gravel)	Simple installation: can be done by hand or machine     A number of these wells can be hooked into one water-supply system	Small diameter provides little reservoir storage     Depth is limited; depends on tightnes of overburden

#### YIELDS FROM SHALLOW OVERBURDEN - SUMMARY

Shallow overburden wells yield less than two gallons per minute in most areas of the northern portion of the County of Simcoe. Areas of 2-10 gallons per minute are found mostly in areas of permeable, surficial sands and gravels of beach, shallow lacustrine, ice-contact and glacio-fluvial origins. Such areas are found along major bodies of water such as Nottawasaga Bay to the west, Thunder Bay to the northwest and Lake Simcoe and along rivers such as Hog Creek and Sturgeon River in the west-central portion of the map area and Coldwater River and Willow Creek in the central portion of the map area. Significant areas yielding 10 to 50 gallons per minute are restricted to raised beach deposits of glacial Lake Algonquin along Nottawasaga Bay in the west. Isolated pockets yielding 10 to 50 gallons per minute and over 50 gallons per minute are scattered in beach, ice-contact, and alluvial sands and gravels in the Midland area and along the west shore of Lake Couchiching.

Areas with insufficient data for yield interpretations are found in the northwest portion of the map area around Wye Lake at Midland, and on Christian, Beckwith, Hope and Giant's Tomb islands. Areas with very thin overburden are found in the northern and eastern portions of the map area.

#### SOURCES OF INFORMATION


Burwasser, G. J., 1974; Quaternary geology of the Collingwood-Nottawasaga area, southern Ontario; Division of Mines, Preliminary Map P.919, Geological Series. Burwasser, G. J., and Boyd, S. T., 1974; Quaternary geology of the Orr Lake area (western half)—Nottawasaga area (eastern half), southern Ontario; Ontario Division of Mines, Preliminary Map P.975, Geological Series. Burwasser, G. J., and Cairns, B. D., 1974; Quaternary geology of the Barrie area (western half), southern Ontario; Ontario Division of Mines, Preliminary Map, P.978, Geological Series. Chapman, L. J., and Putnam, D. F., 1975; Physiography of the Georgian Bay-Ottawa Valley area; Ontario Ministry of Natural Resources, Ontario Research Foundation, Map 2228. Deane, R. E., 1950; Pleistocene geology of the Lake Simcoe District, Ontario; Geological Survey of Canada, Memoir 256. Turner, M. E., 1981; Ground-water probability of the southern portion of the County of Simcoe; Ontario Ministry of Environment, Water Resources Branch, Map 3135.

Geological information was derived from water-well records on file with the Ontario Ministry of Environment up to September, 1979. Map compilation and interpretation by M. E. Turner, 1980. Cartography by D. McQuillan. Base maps derived from 1:50 000 map sheets of the National Topographic

# METRIC CONVERSIONS

= 0.305 metres = 1.609 kilometres = 4.546 litres 1 gallon per minute =  $7.576 \times 10^{-2}$  litres per second

Gallons per minute 0 5 10 15 20 25 30 35 40 45 50 0 0.5 1.0 1.5 2.0 2.5 3.0 3.5 4.0

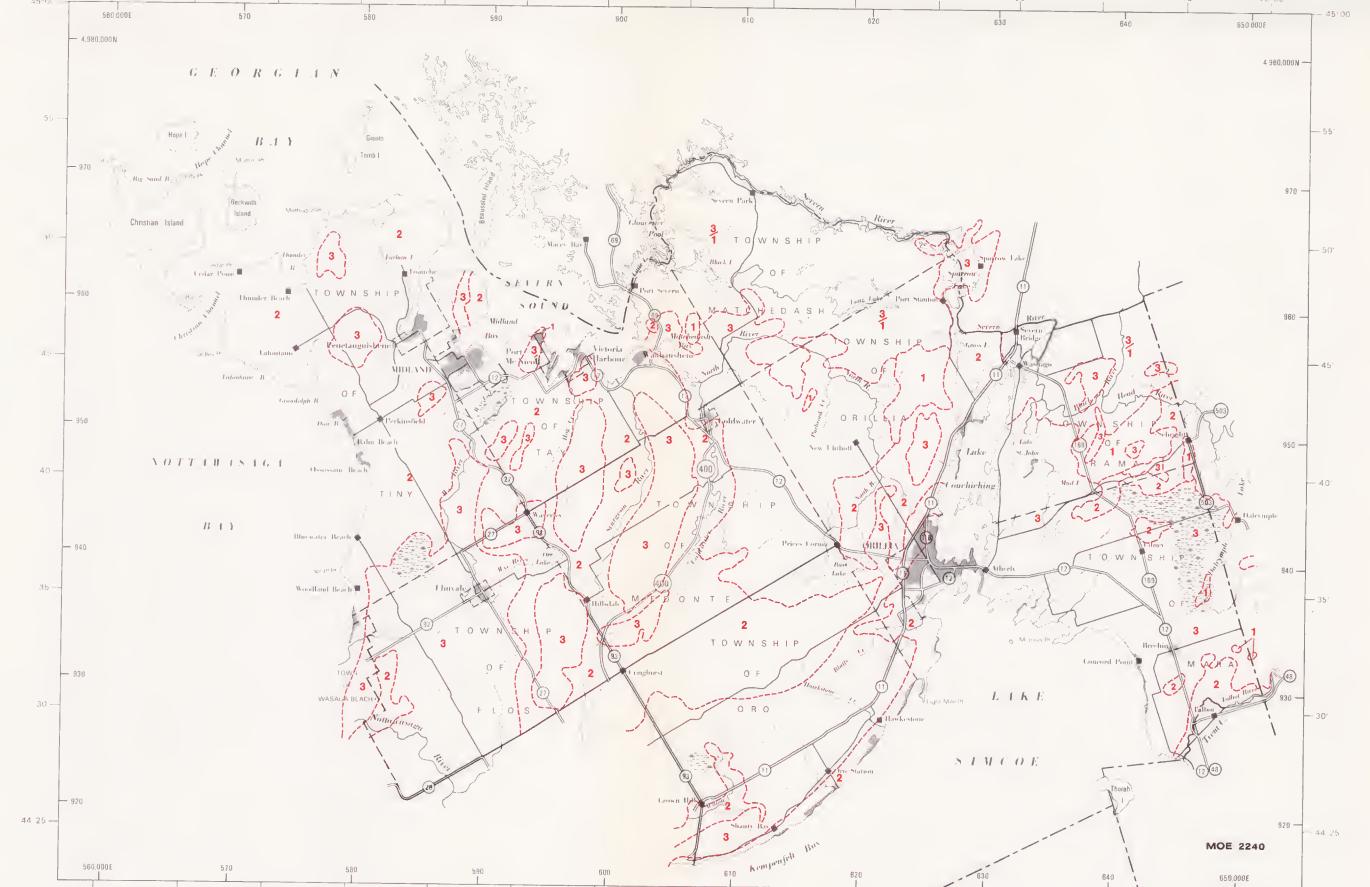

Scale 1: 300 000 1 inch equals approximately 4.73 miles 5 0 5 10 15 Kilometres

# LEGEND

3 Less permeable materials, clay, silt, till

Permeable materials, sand and/or gravel

Bedrock overlain by thin layer of less permeable materials

Swamp

Sheet 4: Water Quality Hydrogeologic interpretations are based on data obtained from approximately 8,000 water-well records on file with the Ontario Ministry of the Environment and from past-documented studies of ground-water availability. The appropriate references are listed on each map sheet. Reliability of the interpretations varies throughout the region and a periodic up-dating or revision of the present interpretations may be necessary as new hydrogeologic information becomes

It is important to note that the interpreted probable well yields may not everywhere represent yields available to all wells because of variations in local hydrogeology, type of well construction, and in the reliability of available data. However, the indicated yields are thought to be good approximations in most areas. In cases where reliable, long-term yields are sought, it is necessary to undertake detailed hydrogeologic investigations and pumping tests.

# ASSESSING WATER REQUIREMENTS

In order to evaluate well yields, the amount of water required from a prospective well should first be estimated. To estimate the approximate domestic and livestock daily water requirements, multiply the number of users (people and animals) by the appropriate figure in the table below. If desired, an additional 20 to 30% can be added to the total to account for increased demand in the future. While individual residential needs are difficult to estimate, most homes with water-consuming items such as washing machines will average about 100 gallons per day per person. It is important to take into account the water demand during peak periods of usage in order that the well does not run dry temporarily. This demand can be estimated by counting the number of fixtures and water outlets in the house which will be used at one time, and multiplying by the flow rate for each. Tables showing the flow rate per fixture can be obtained from water-supply equipment dealers.

Approximate Dally Weter Requiremente

(kitchen, laundry, bath)
for each producing milk cow
(incl. washing)
for each dry cow for each steer, horse for each hog for each sheep for each 100 chickens for each 100 turkeys

50-150 gallons per day 35 gallons per day 15 gallons per day 12 gallons per day 4 gallons per day 2 gallons per day 6 gallons per day 12 gallons per day

Note: —table modified from F. R. Hore, Farm Water Supply, Ontario Department of Agriculture and Food, Publication 476 For information on irrigation requirements, contact your Regional Office of the Ontario Ministry of Agriculture and Food.

By using the maps in this publication along with the following step-by-step procedure, prospective well sites can be evaluated in terms of probable yields, likely depths to water-bearing zones, and likely quality of water at each site. Subsequently, this information can be used in other considerations such as possible water treatment, pump type and size, well cost, and type of well construction (a table illustrating the different types of well construction and their applications is appended).

The maps should be used in the suggested sequence in order to obtain the most should be consulted first. Progressively deeper and more costly wells will have to be constructed as water is sought from deeper formations in order to obtain the yields indicated on maps 3126-3 and 3126-5.

# **Evaluation Procedure**

To evaluate yields:

1. locate the well site on Map 3126-1 of Sheet 1 (Yields from Shallow

2. note the colour of the map at the well site; 3. refer to the legend and relate the colour to the appropriate probable yield, 4. if the probable yield does not meet your water requirements, repeat steps one through three using Map 3126-3 on Sheet 2 (Yields from Deep Overburden). Similarily, if probable yields determined from Map 3126-3 are insufficient, repeat the same steps using Map 3126-5 on Sheet 3 (Yields from Bedrock).

# To evaluate the depths to water-bearing zones:

5. If Map 3126-1 was selected in the above steps, water-bearing zones occur at depths easily reached by shallow dug and bored wells and sand points; if Map 3126-3 was selected, locate the well site on Map 3126-4 and note the depth to the water-bearing zones by using the legend; if Map 3126-5 was selected, locate the well site on Map 3126-6 and note the depths to the water-bearing zones by using the legend. the water-bearing zones by using the legend;

6. exact depths to water-bearing zones for individual wells are shown on maps 3126-1, 3126-3 and 3126-5.

To evaluate water quality:

7. to evaluate the likely ground-water quality at a potential well site, locate the well on the selected yield map and note the nearby ground-water sampling points. Chemical analyses of these samples are found in the Inorganic Chemical Analyses (tables 1.2, and 3) on Sheet 4. To interpret the significance of the analyses, refer to the "Water Quality" section on Sheet 4.



COUNTY OF SIMCOE (Northern Portion)

Map 3126

**GROUND-WATER PROBABILITY** 

SHEET 1

WATER SUPPLIES IN SHALLOW OVERBURDEN (WITHIN 50 FEET OF SURFACE)